


(If internal schematic of the switch is not shown, the image of the switch represents the back view of the connector as it is connected to the switch.)

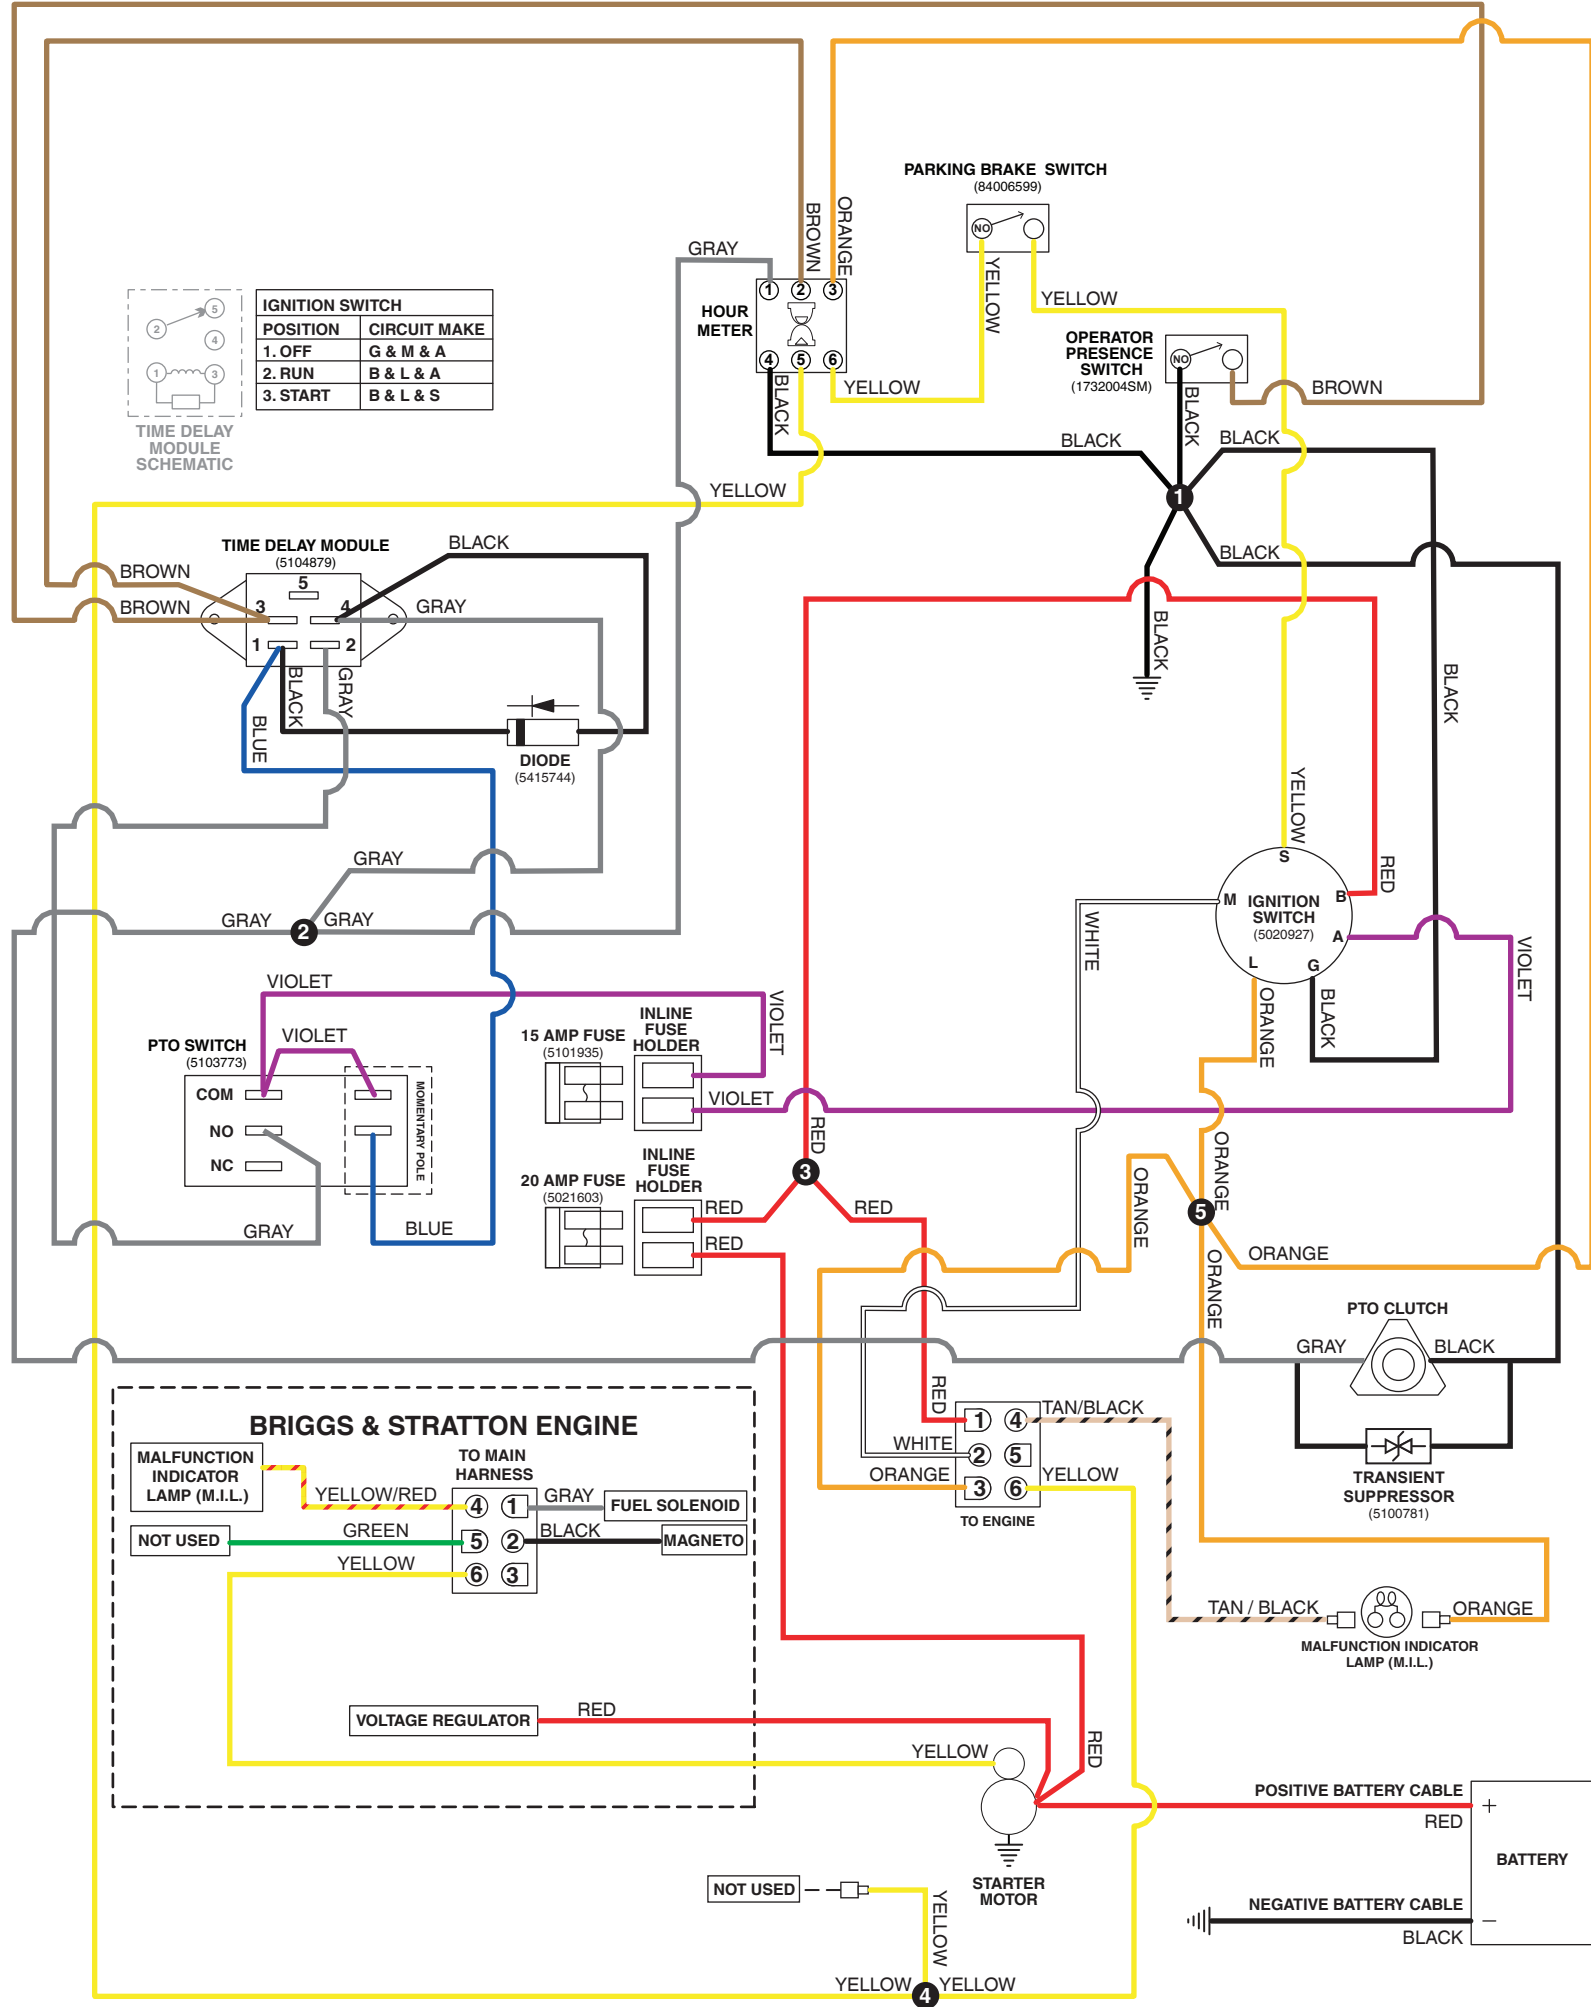

IGNITION SWITCH

POSITION	CIRCUIT MAKE
1. OFF	G & M & A
2. RUN	B & L & A
3. START	B & L & S



TIME DELAY MODULE (5104879)

15 AMP FUSE (5101935)

20 AMP FUSE (5021603)

BRIGGS & STRATTON ENGINE

